


32

17

16

1

SOUND DESK

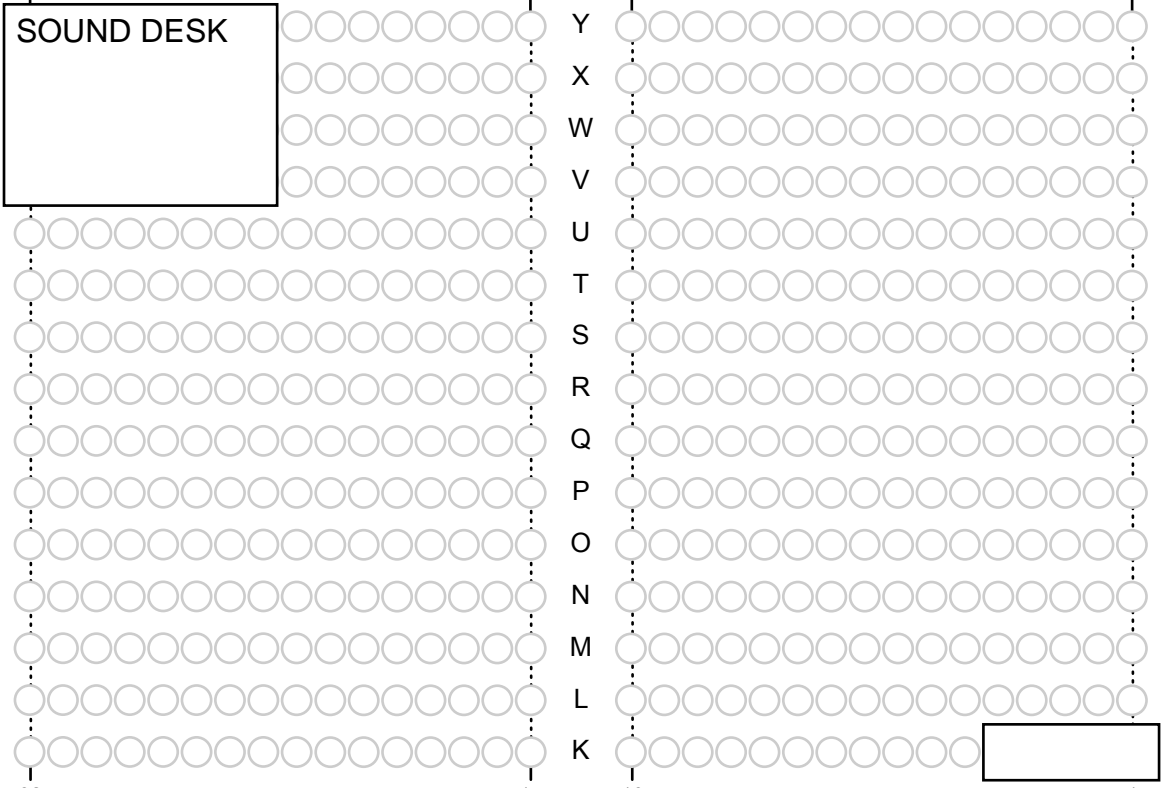

32

17

16

1

UPPER LEVEL




32

17

16

1

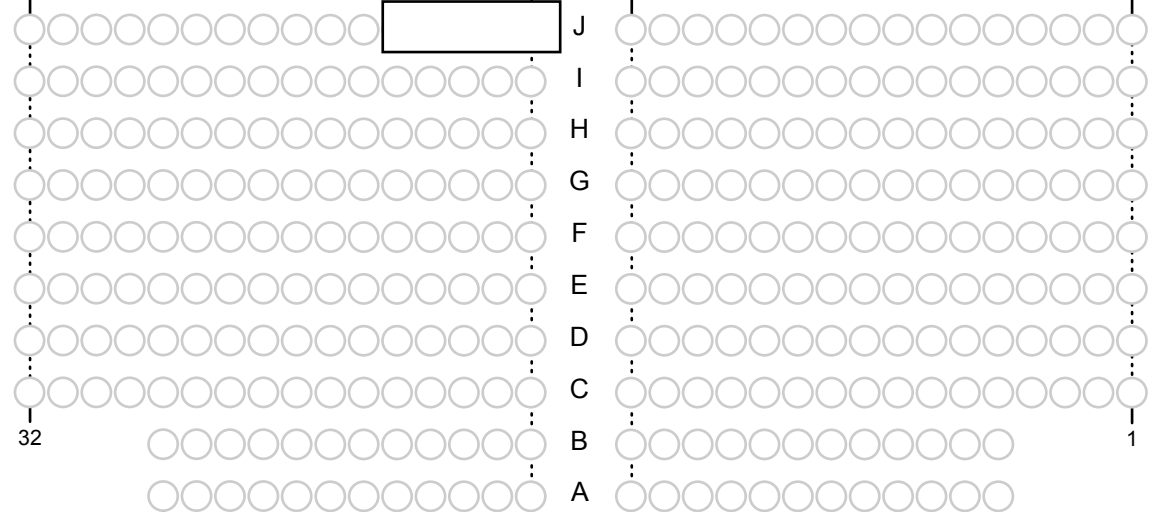

32

17

16

1

28


17

16

5

ORCHESTRA

STAGE

KEY  Exit